








# BMW F900XR '20-

## M O U N T I N G I N S T R U C T I O N S

REF 20391

TOURING SCREEN

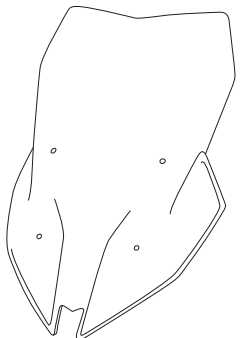


ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Cúpula TOURING	TOURING screen	1	20391 W/H/F/N
2		Tornillo especial M5x9 long hexagonal 14	M5x9 special screw hexagonal length 14	4	TORNI-EC----597
3		Arandela de nylon M5x1	M5x1 nylon washer	4	ARNV0000000245
4		Silentblock Ø9XØ6X8mm	Ø9XØ6X8mm silentblock	4	AROPASACABLES-3
5		Casquillo con valona Ø12XØ6,8X7,3	Ø12XØ6,8X7,3 bush with blange	4	CASQUI-1A---750
6		Tornillo Allen M5X16 Ø11 ISO 7380	M5X16 Ø11 ISO 7380 Allen screw	4	TORNI-I7380-493
7		Tapón tornillo M5 ISO 7980	M5 ISO 7980 Allen cap screw	4	TAPON-----85

# BMW F900XR '20-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**1**

DISASSEMBLY  
DESMONTAJE

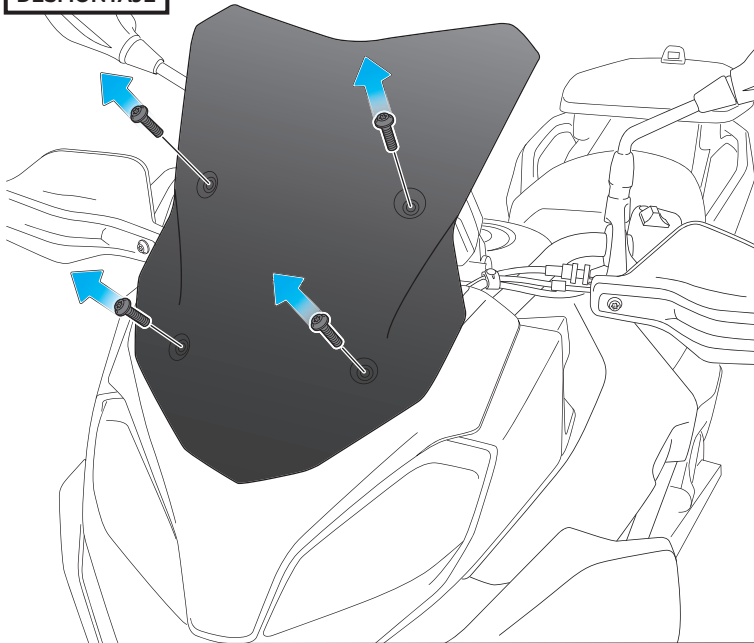


**2**

ASSEMBLY  
MONTAJE

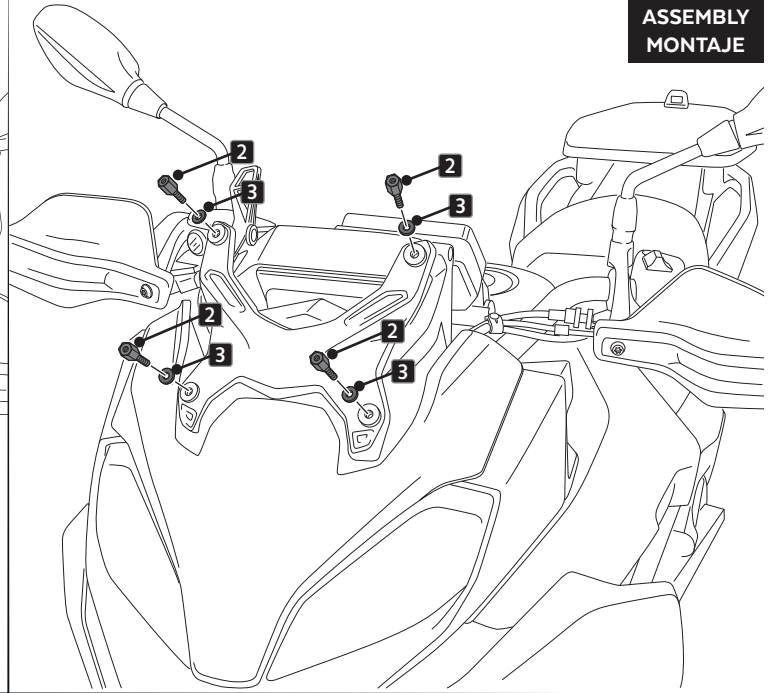

**3**

ASSEMBLY  
MONTAJE

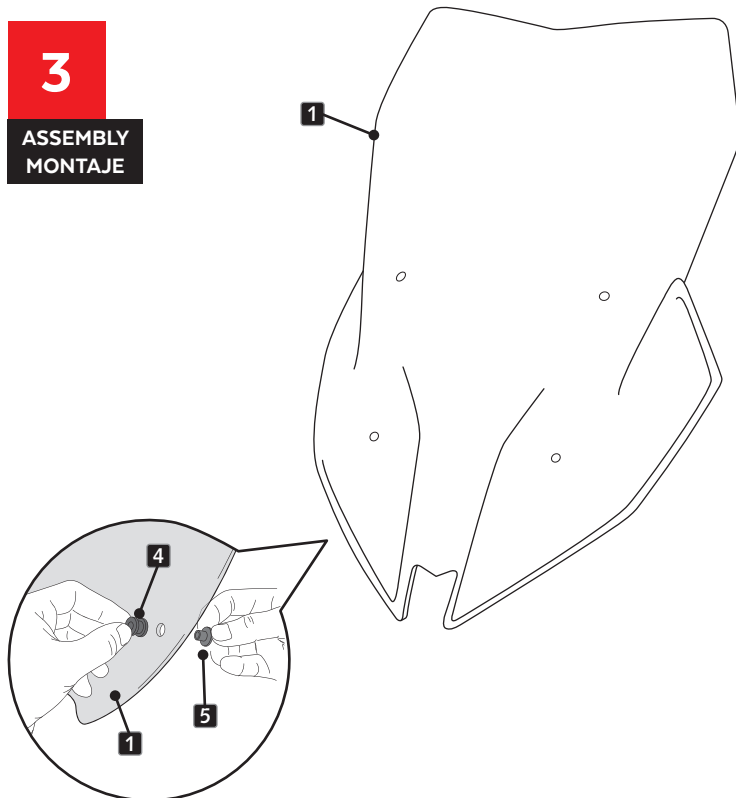

**4**

ASSEMBLY  
MONTAJE

