

INSTALLATION INFO for DNA P-BE6N15-01

Application: BENELLI BN600 13'-16'


The DNA High Performance Air Filter P-BE6N15-01 is designed to replace the stock BENELLI Foam air filter/metallic supporting frame and increase the Airflow, filtering efficiency, Power, Torque and Throttle response.



It is highly recommended that this installation be carried out by an experienced mechanic!

1. Remove the stock air filter and the metal perforated frame from the bike, following the instructions found in the official BENELLI workshop manual.

Be very careful when removing the stock filter and frame, so debris doesn't fall in the clean side of the air box.

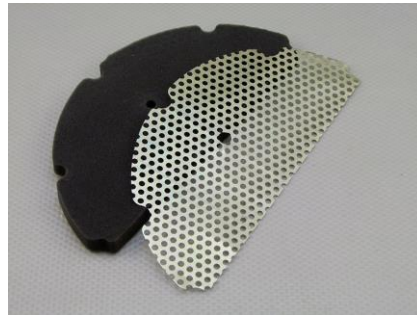

Attention: the metal frame will **NOT** be used with the DNA filter!

2. Install the DNA filter, pay attention to install the top side correctly! The filter top side is marked, see photo below:



- Follow the above procedure each time you need to remove the DNA filter for servicing it.

Service every 15.000 km or earlier when used in extremely dusty environment.

Use the dedicated DNA Service Kit DSK-2001 (sold separately) to clean and re-oil, following the instructions included with the service kit.

The manufacturer and seller make no warranties express or implied which extend beyond the description of the goods contained herein. Any description of this product is for the purpose of identifying it and shall not be deemed to create an express warranty.

www.dnafilts.com
www.facebook.com/dnafilts
techsupport@dnafilts.com