

INSTALLATION INFO for DNA filter P-H10S08-0R

For: Honda CBR 1000 RR 2008'

The DNA High Performance filter P-H10S08-0R is designed to replace the CBR 1000 RR 2008 stock replacement filter,
To install or later remove your DNA filter for cleaning it, please follow the detailed info listed below:
(We recommend that the installation should be carried out by a trained mechanic)

1. Unbolt the top of the airbox to access the 2 screws that secure the stock filter in place.

Unscrew carefully and remove the stock filter.

Pay attention NOT to drop the 2 screws in the airbox!


Clean the airbox carefully, removing all the debris.

2. The DNA filter uses 2 inox bolts (A & B) in 2 specially designed chambers that will not allow the screws to drop in the airbox even if they get loose. Using your fingers to push the 2 bolts from underneath, back in the filter, in order to allow the filter to seat properly in the airbox.

Install the DNA filter in the airbox, push it down to locate in place and tighten the 2 bolts, carefully, using a No. 2 Philips screwdriver. Check if the DNA filter is properly bolted in place and does not move.

Attention: Do not over tighten!

The bolts are self tapping bolts and if over tightened they will destroy the thread.

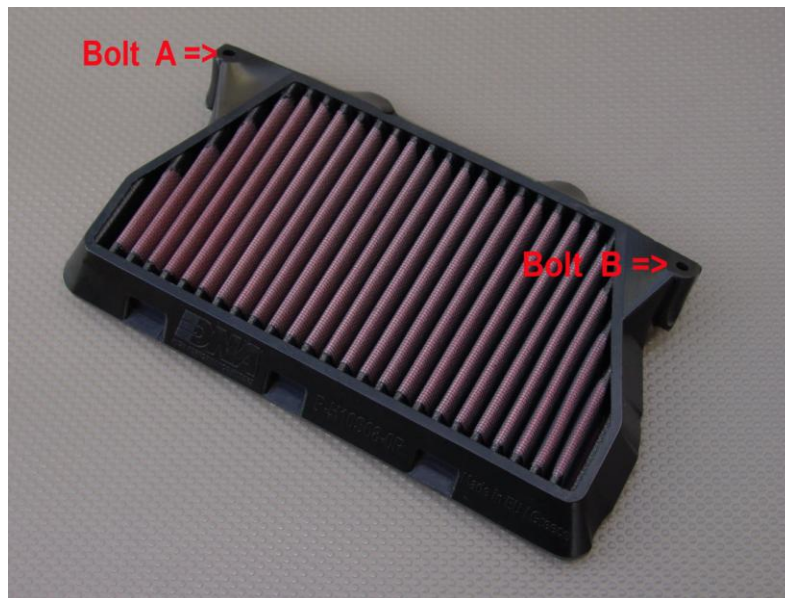

Carefully close the airbox and the installation is completed.

Follow the Service Kit Instructions to service.
Re-install following the installation procedure again.

www.dnafilters.com

Made in EU / Greece

The manufacturer and seller make no warranties express or implied which extend beyond the description of the goods contained herein. Any description of this product is for the purpose of identifying it and shall not be deemed to create an express warranty.