

The DNA High Performance filter P-Y6S08-0R is designed to replace the R6 2008 stock replacement filter,
To install or later remove your DNA filter for cleaning it, please follow the detailed info listed below:
(we recommend that the installation should be carried out by a trained mechanic)

1. Unbolt the top of the airbox to access the stock filter.

Carefully remove the stock filter following the procedure found in the Yamaha owner's manual.

Clean the airbox carefully, removing all the debris.

2. Install the DNA filter in the airbox. Please note that the Center bolt (Fig. 1) that is used to remove the stock filter from the airbox will not be used with the DNA filter.

The DNA filter has a special tab, molded on it (Fig. 2), that will seal the existing hole of the airbox.

Fig. 1

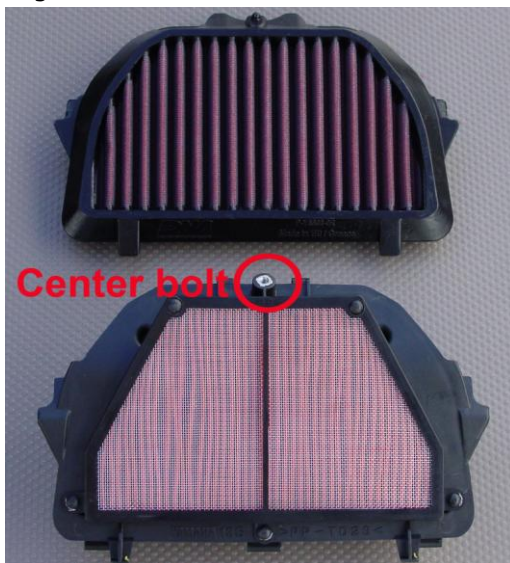


Fig. 2



3. Install the top of the airbox , secure all the bolts and the installation is completed.

Follow the Service Kit Instructions to service.
Re-install following the installation procedure again.

www.dnafilters.com

Made in EU / Greece

The manufacturer and seller make no warranties express or implied which extend beyond the description of the goods contained herein. Any description of this product is for the purpose of identifying it and shall not be deemed to create an express warranty.