

INSTALLATION INFO for DNA filter R-BM6E09-01
For: BMW 650 G 2009'

The DNA High Performance filter R-BM6E09-01 is designed to replace the BMW stock replacement PAPER filter element.
The DNA can be used for road, Off road and race use.


To install or later remove your DNA filter for cleaning it, please follow the detailed info listed below:
(we recommend that the installation should be carried out by a trained mechanic)

- 1.** Remove the stock filter from the bike following the instructions found in BMW's service manual.

Pay attention to remove carefully the old filter, so no debris falls in the clean side of the air box.


ATTENTION: Do not drop the bolts in the air box.

- 2.** Install the DNA filter on the stock BMW frame, paying attention that the correct side is placed against the air box tab.

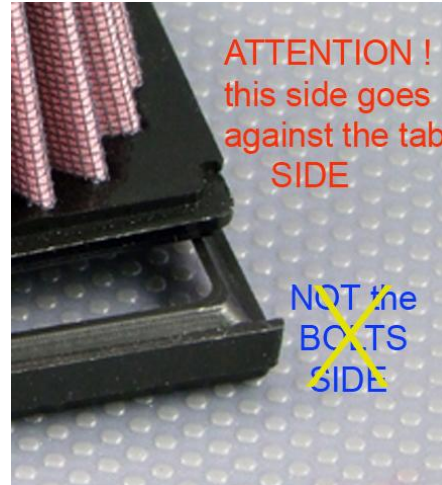

One side of the DNA filter is specially designed to seal perfectly against the TAB side of the air box. If this side is not placed correctly the filter will not sit properly in place and plastic BMW frame will be DAMAGED, dirt will enter the air box and possible engine damage will occur.

- 4.** Install the DNA and the BMW frame in the air box as following:

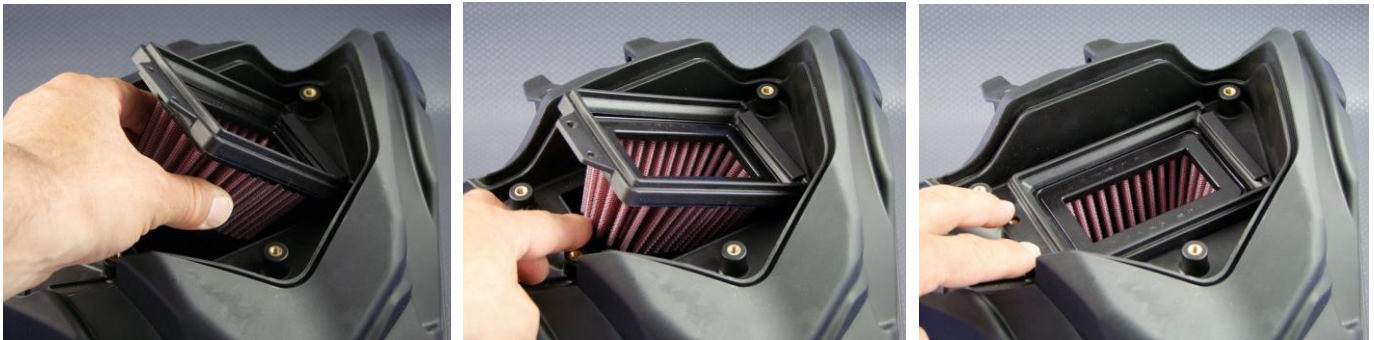

Bolt the filter frame in place; reinstall the cover and body work, following the BMW service manual.

Service instructions: ATTENTION: Follow the DNA Service Kit Instructions carefully to service (not included with the filters).

www.dnafilters.com

Made in EU / Greece

The manufacturer and seller make no warranties express or implied which extend beyond the description of the goods contained herein. Any description of this product is for the purpose of identifying it and shall not be deemed to create an express warranty.