


# SHAD

KAWASAKI VERSYS 1000 '19  
K0VR19NIF

**3P**  
SYSTEM

DESIGNED IN  
BARCELONA

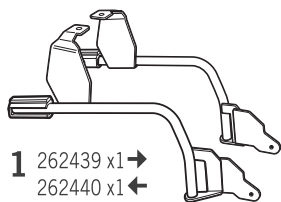

1 262439 x1 →  
262440 x1 ←



2 303025 x2  
Ø10



3 304052 x2  
M6 x 20 DIN 7380



4 303017 x4  
Ø6



5 302021 x2  
M6

## ! WARNING!

GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D


Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

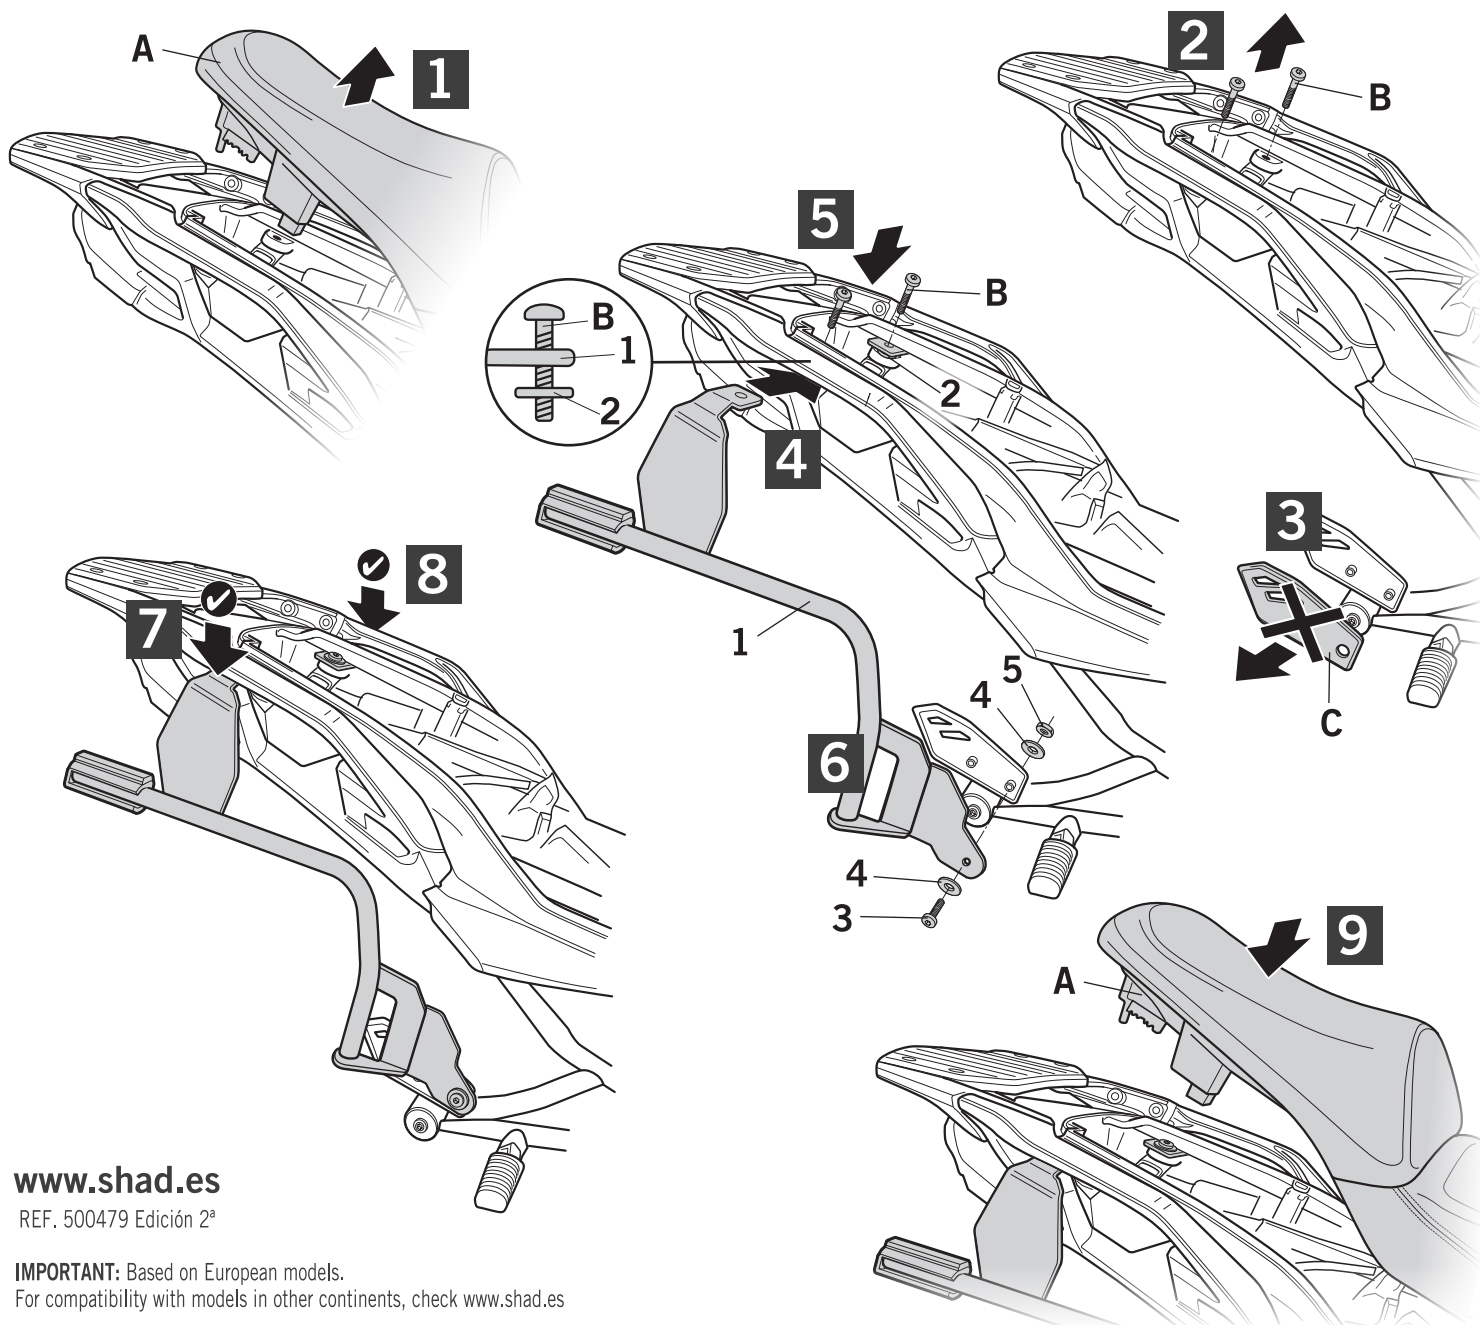

[www.shad.es](http://www.shad.es)

REF. 500479 Edición 2ª

**IMPORTANT:** Based on European models.  
For compatibility with models in other continents, check [www.shad.es](http://www.shad.es)