


# SHAD

## TRIUMPH TIGER SPORT 1050 '16 KIT TOP TOTG16ST

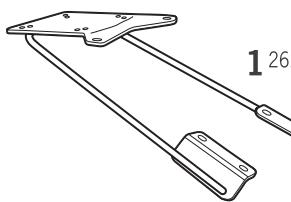

1 262242 x1



2 303045 x6  
Ø8



3 304081 x2  
M8 x 20 Din 7380



4 304039 x4  
M8 x 40 Din 7380



5 303025 x4  
Ø10



6 261121 x4  
Ø20 Ø11 x 18



### WARNING!

**(GB)** Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

**(E)** No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

**(D)** Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

**(I)** Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

**(F)** Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

**ATTENTION:** For a full equip assembly, mount the 3p system before the top master.

